

Using touch gestures

Touch technology

When you use SMART Board™ interactive whiteboards, you can perform touch and multitouch gestures on the interactive surface to control software applications.


SMART Board 800 series interactive whiteboard


Two people can work together anywhere on the interactive surface.

SMART Board D600 series interactive whiteboard

Two people can work together on separate sides of the interactive surface when using SMART Notebook™ collaborative learning software's dual-user mode.

Using touch gestures

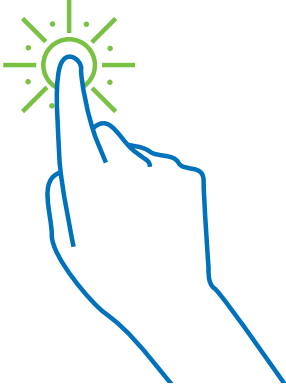Click
Quickly tap your finger on the interactive surface.


Double click
Quickly tap the interactive surface twice in the same spot.


Using touch gestures

Right-click

Press and hold your finger on the interactive surface for three seconds.




OR

Press the **Right-Click** button on the SMART Pen Tray.



Erase

Use your flattened hand, palm or fist to press the interactive surface and move your hand across the area you want to erase.

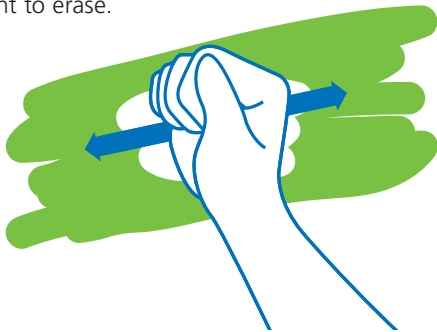

OR

Use the eraser tool in the SMART Pen Tray.





Using touch gestures

Using multitouch gestures

To enable gestures


1. Open the SMART Control Panel from the Windows® notification area
2. Press **SMART Hardware Settings**. The upper area of the Control Panel displays an image of the SMART product connected to the computer.
3. Press the image of the product whose settings you want to change
4. Select **Mouse and Gesture Settings** from the list
5. Select **Enable Single-Touch Gestures**
6. If you haven't done so already, select **Multitouch Mode**
7. Press **OK** to close the Control Panel

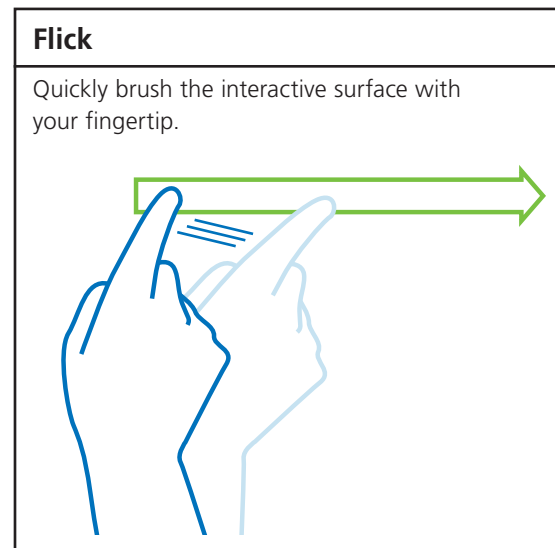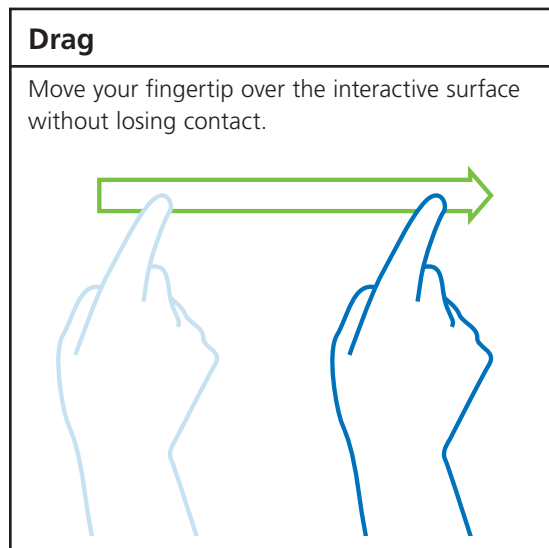

Using touch gestures


Pinch

Touch the interactive surface with two fingers and bring them closer together.

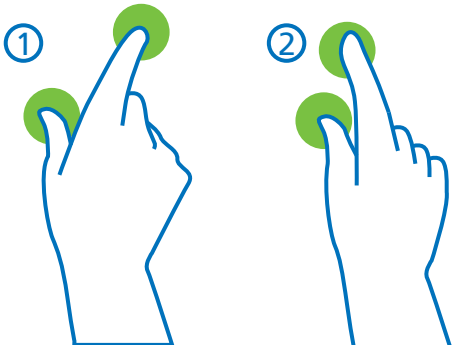

Spread

Touch the interactive surface with two fingers and move them apart.

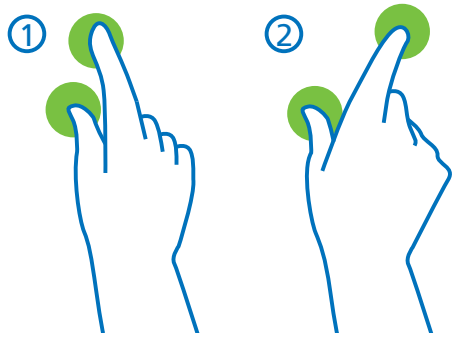

Rotate

Touch the interactive surface with two fingers and move them in a clockwise or counter-clockwise direction.

